

Please Note: The InfoLock portion of the sign resides behind the sign display and is comprised of sliding bands that lock into either a concealed or exposed position. The illustration below explains how to extend the band and return it to its original position.

Never force the bands in or out without releasing them first by pressing the release button at the bottom of the sign. The InfoLock frame is shown below the sign display to simplify instructions.

1. Locate the locking pin release button at the bottom corner of the side of the sign where the bands you wish to release are located.


2. Gently press the button upward and pull (or push) the band. You may then release the button.

IMPORTANT: Extend the band fully until it snaps into its locking position.

3. Once the release button is pressed, all bands are free and able to be moved. Be sure that other bands remain in their respective locations.

IMPORTANT: For the system to function properly, all bands must always be in either a fully concealed or fully exposed locked position.

To troubleshoot any non-locking bands, press the release button and slide all bands to the closed position until they lock, then repeat the above steps.

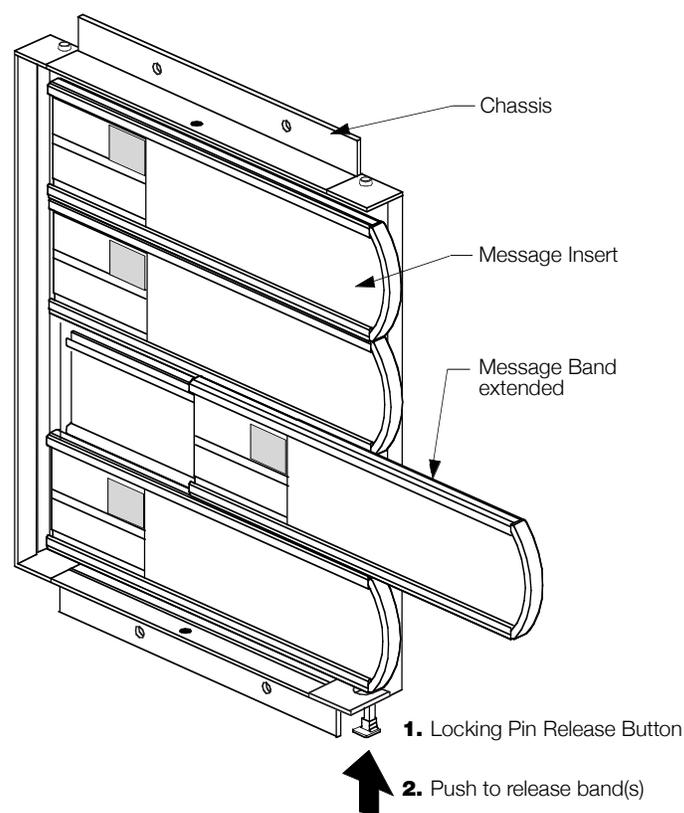


Message Insert Replacement Procedure

1. Extend the message band outward fully until it locks into the exposed position (see above).

2. Gently flex the plastic end cap inward toward the wall just enough to allow the message insert to slide out.

3. Remove the message insert completely.

4. Replace message by gently flexing the end cap enough to slide the replacement insert fully into the aluminum channel.

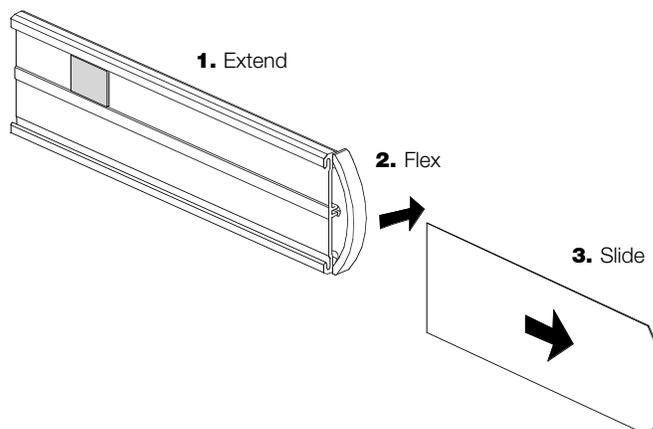

Patented