


aspire™

Installation Instructions (Double-Bracket and Small Single-Bracket Assemblies)

All Double-Bracket Assemblies & Small Single-Bracket Assemblies (4"h and smaller) Components Overview & Wall Mounting Instructions

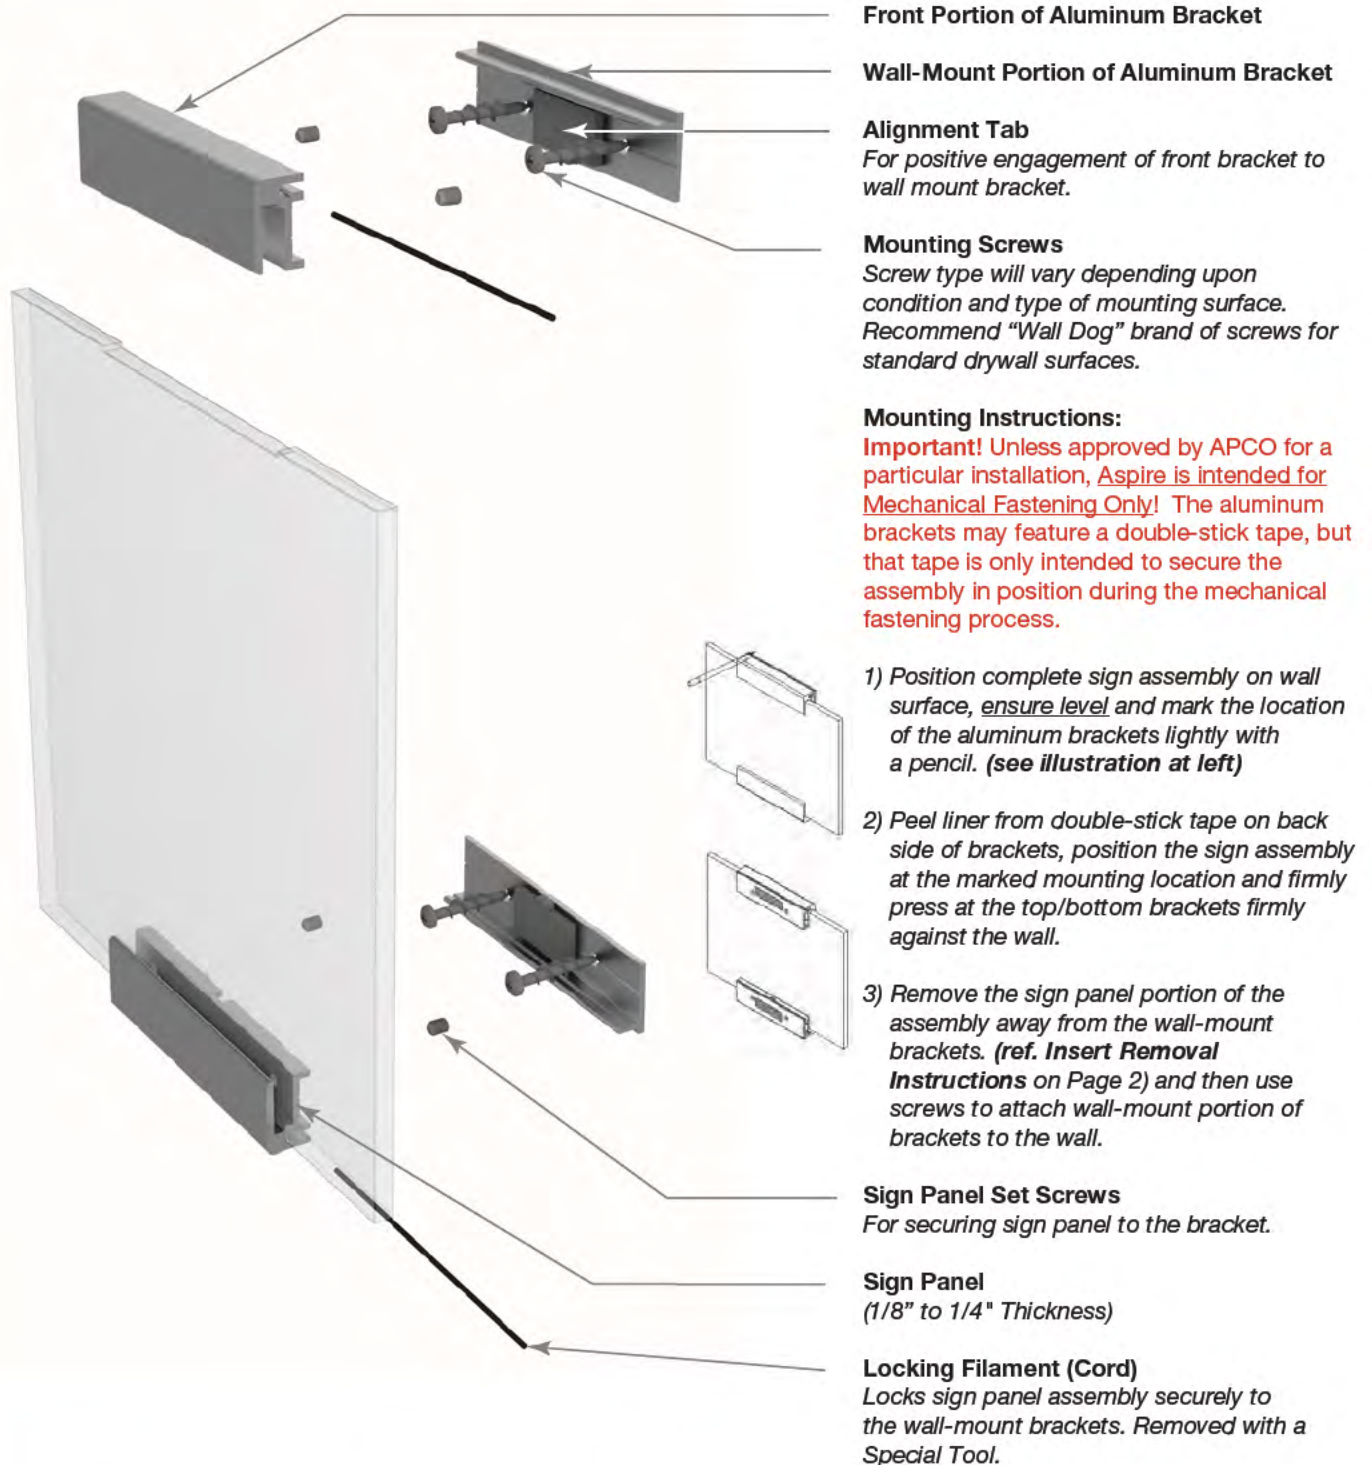



Insert Removal/Replacement Instructions

(Double-Bracket and Small Single-Bracket Assemblies)

All Double-Bracket Assemblies & Small Single-Bracket Assemblies (4" and smaller)

Insert Removal / Replacement



Locate the 1/16" diameter hole at either side of the top or bottom bracket.



The Aspire Removal Tool is a 2-part tool. One side features 1-1/8" long steel pin, and the other side features a 3/32" Allen wrench. The steel pin is used for removing a concealed cord from within the assembly.



Position the steel pin at one of the holes at either side of the aluminum bracket and then push inward until the plastic cord of the removal tool flushes with the side of the bracket.



Grab the now exposed length of cord at the opposite side of the aluminum bracket and pull it completely from the bracket.



Next, simply repeat the process with the 2nd of the two brackets.



Once both cords have been removed, the entire sign assembly can be pulled away from the wall mount brackets. There will be pre-drilled holes in the wall-mount bracket for screw mounting to the wall.



Two set screws are used to attach the aluminum bracket to the sign panel. Use the Allen wrench portion of the Removal Tool to loosen the set screws enough to remove/change the insert.



Once the brackets are removed, you'll see the 1/16" cutout on the sign panel. This laser-cut notch ensures positive alignment/positioning within the bracket.




Insert Removal/Replacement Instructions

(Medium-to-Large Single-Bracket Assemblies)

Medium-to-Large Size Single-Bracket Assemblies (greater than 4"h)

Components Overview & Wall Mounting Instructions

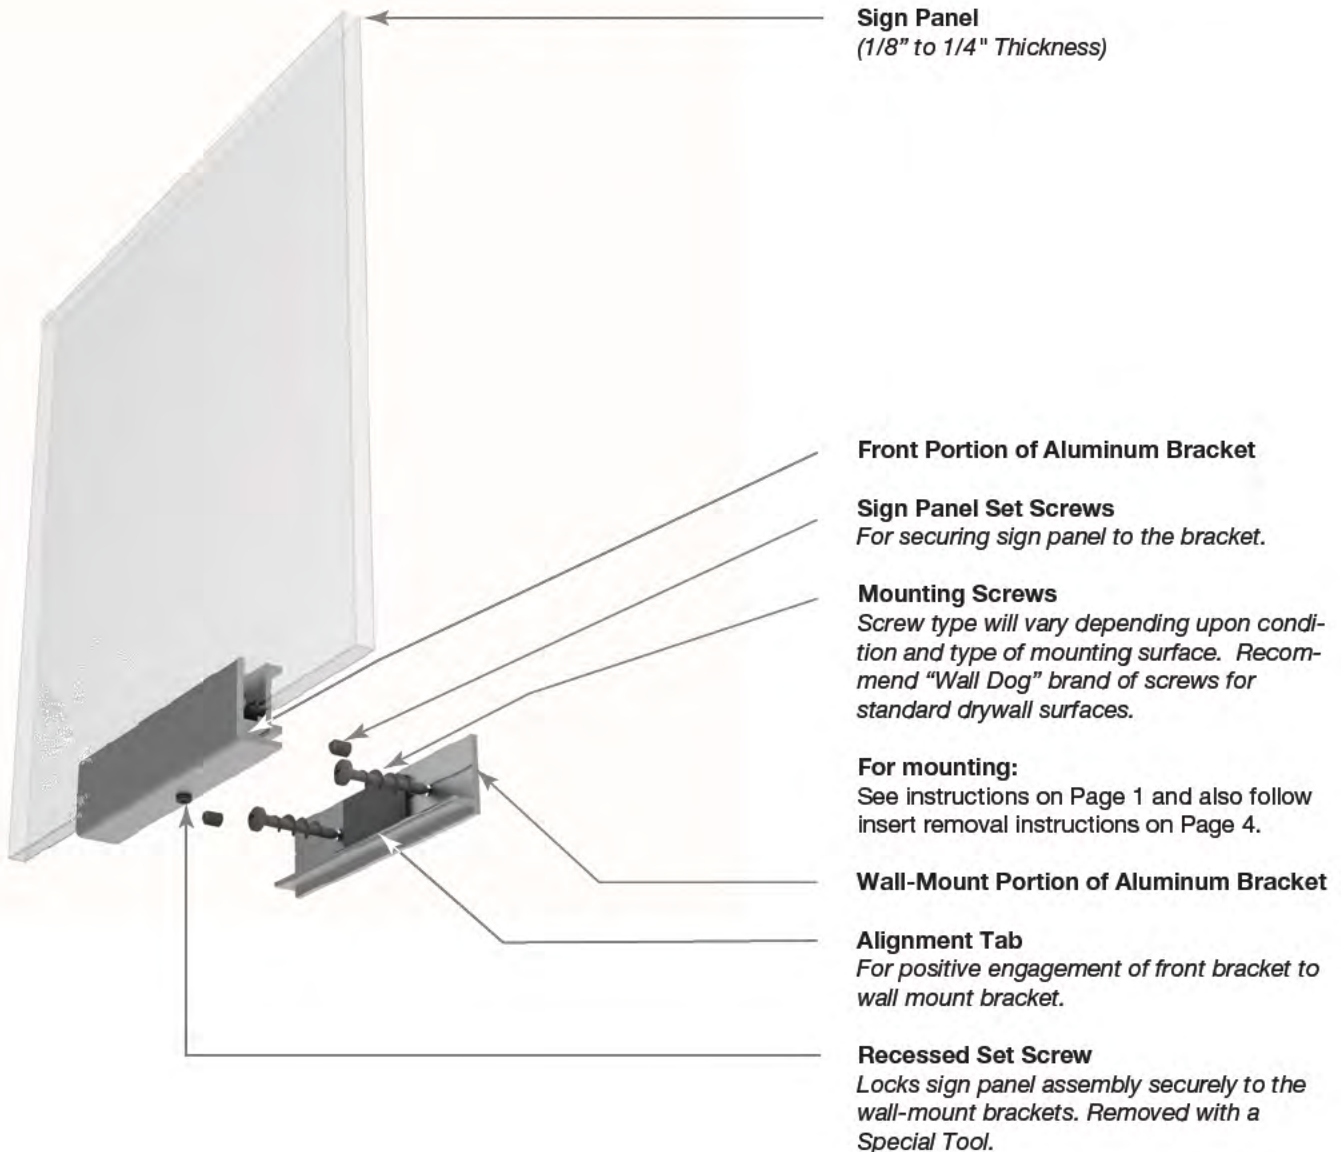



Installation Instructions

(Medium-to-Large Single-Bracket Assemblies)

Medium-to-Large Size Single-Bracket Assemblies Cont. (greater than 4" h)

Insert Removal / Replacement



Locate the 1/8" diameter hole at the center/bottom of the bracket. Within that hole, there is a set screw that secures the front portion of the bracket to the wall mount bracket.

Insert the Allen wrench portion of the Removal Tool fully into the hole so that it engages w/ the set screw. Then turn from right to left 2-3 ½ turns until you feel the screw loosen.

Important! The screw only has to be slightly loosened in order for the display plaque portion of the sign to be removed from the wall bracket. There is no need to fully remove the set screw from the bracket.



Once the bottom set screw is loose, the sign assembly can be removed from the wall mount bracket and the display can be changed by using the same Allen wrench to loosen the two set screws on the back side of the aluminum bracket holding the sign panel.