


**Please Note:** The InfoLock portion of this sign is comprised of movable bands that will likely undergo daily use. Installers must use secure anchors to mount this sign to the wall.

Recommended anchors: Caulk-in or machine bolt anchors for solid walls such as brick or concrete, 'Wall Dog' anchors or toggle bolt anchors for sheet rock walls. The maximum size screw for anchoring is #8.

1. Loosen but do not remove (2) phillips head screws located in the top and bottom of the InfoLock chassis. The screws may remain in the chassis to remove the sign, loosen screw until the sign flange releases from the chassis.
2. Locate the Mounting Holes top and bottom of the horizontal chassis.
3. Transfer mounting hole pattern to wall surface and install suitable anchors. Install InfoLock chassis to the wall and carefully tighten screws.
4. Complete installation by re-installing the sign by inserting flanges into the frame, and re-tightening screws (see figure below).

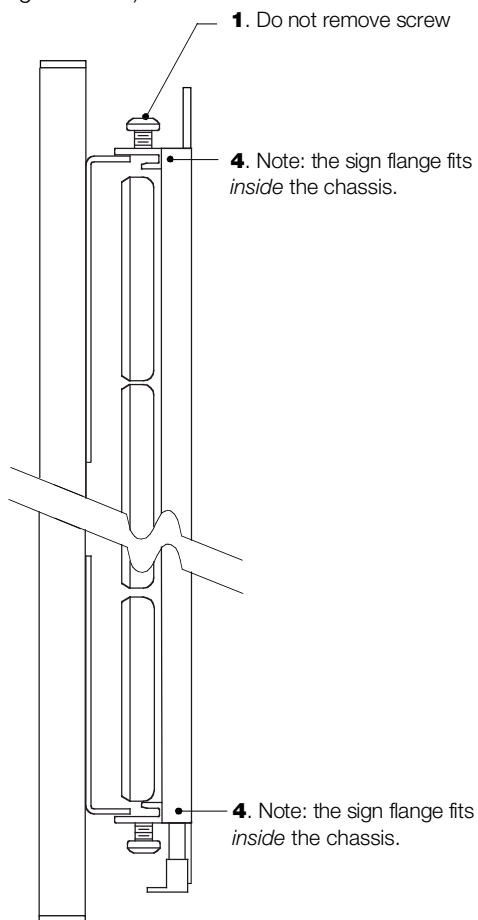

Sign Attachment to Frame  
Detail View

